

G

Gable Truss Hardware
 (For 40' and under)



x6 3/8" - 7x4" Hex
 Lag Screw HDG

x6 7/16" - 14x1" Gr 5
 Hex Bolts & Gr 2 Nuts

L

Lean-To Truss Hardware
 (For under 30')



x8 3/8" - 7-4" Hex Lag Screw HDG

A

Anchor Hardware Kit
 One kit per Sturdi-Wall Bracket (Wet & Drill Set)



x4 Spax Lag Screw

x2 Carriage Bolts 7"
 w/ Washer & Nut

Drill Set Anchor Bolts
 x2 Per Drill-Set Anchor




5/8" x 5" Anchor Bolt

Drill Bit




5/8" x 6" Drill Bit

Drill Set Anchor

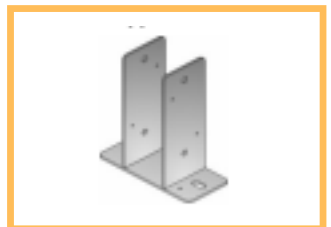

Sturdi-Wall
 Drill-Set Anchor Bracket

Wet Set Anchor

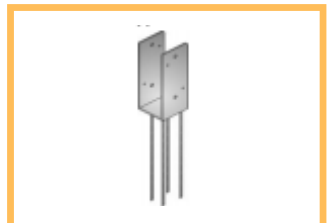

Sturdi-Wall Plus
 Wet-Set Anchor Bracket